



REPLACEMENT KIT

PART NUMBERS:

- EN5065-01.
- EN5065-02.
- EN5065-03.

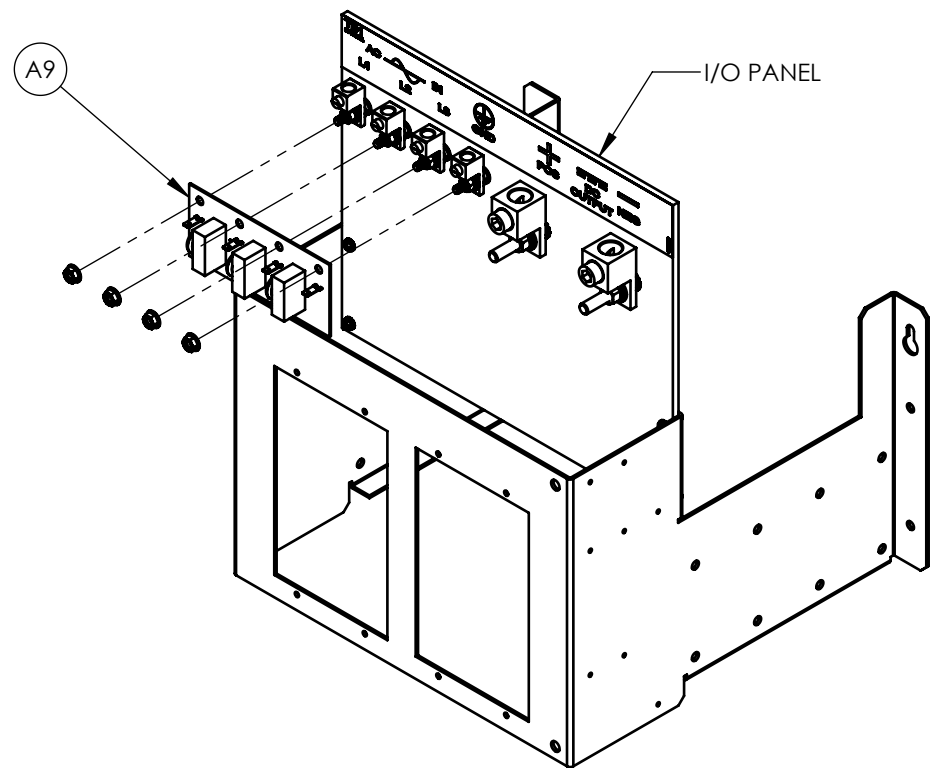

ISO VIEW

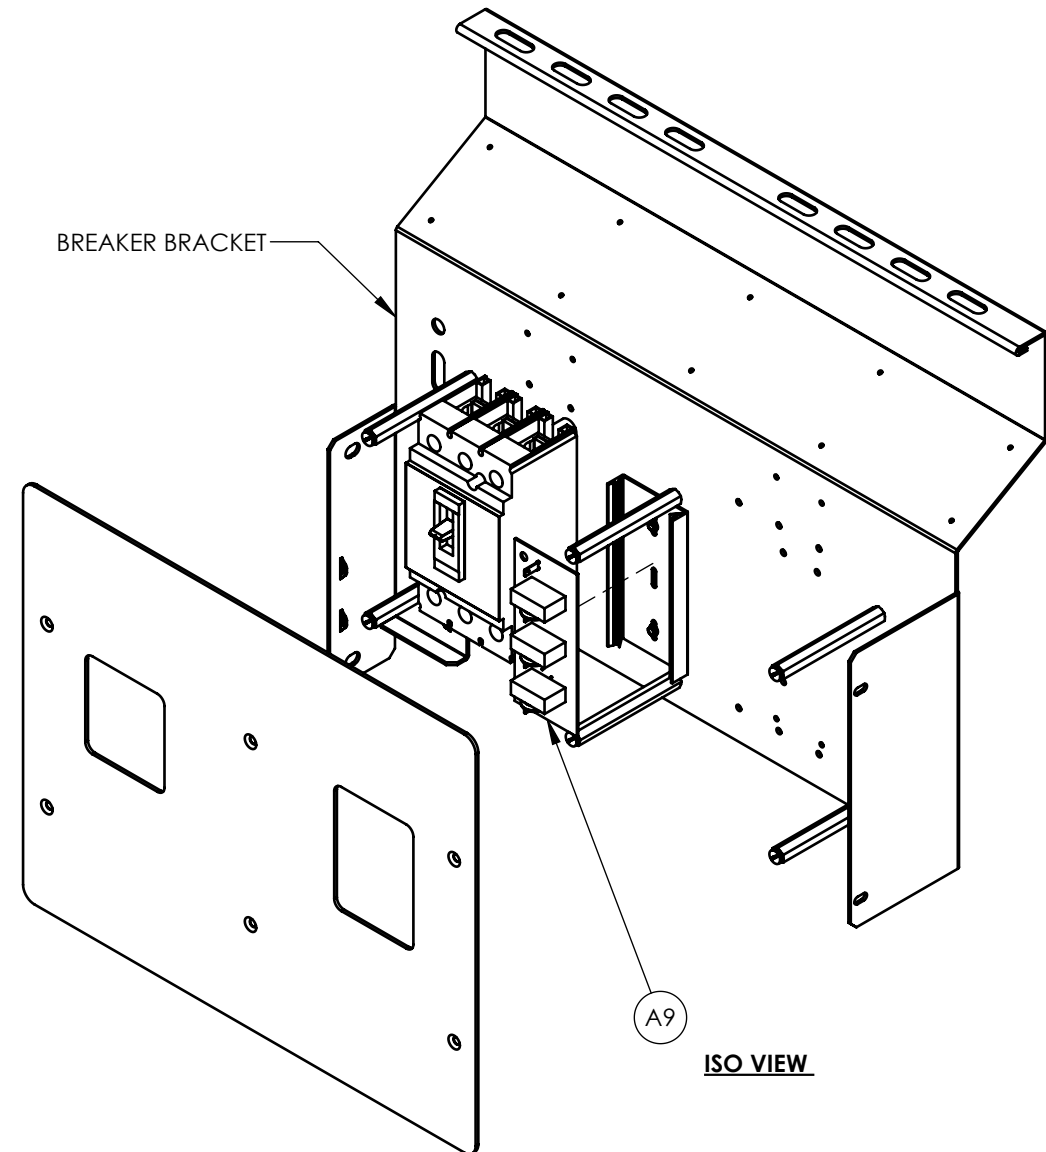

ISO VIEW

**STYLE 5030 INSTRUCTIONS:**

1. TURN OFF (OPEN) AC INPUT CIRCUIT BREAKER (CB1), AND DC OUTPUT CIRCUIT BREAKER (CB2).
2. ALLOW INTERNAL VOLTAGES TO DISSIPATE.
3. OPEN DOOR PANEL, AND CAREFULLY REMOVE PLEXIGLASS SHIELDS.
4. USING A VOLTMETER, VERIFY ALL POTENTIAL VOLTAGES ARE AT "0".
5. LOCATE (A9) MOV BOARD AS SHOWN, MOUNTED ON I/O PANEL.
6. REMOVE 1/4-20 HARDWARE FASTENING (A9) MOV BOARD TO I/O PANEL.
7. LIFT (A9) MOV BOARD OUT OF ATevo.
8. MOUNT REPLACEMENT (A9) MOV BOARD USING 1/4-20 HARDWARE.

**STYLE 163/198 INSTRUCTIONS:**

1. TURN OFF (OPEN) AC INPUT CIRCUIT BREAKER (CB1), AND DC OUTPUT CIRCUIT BREAKER (CB2).
2. ALLOW INTERNAL VOLTAGES TO DISSIPATE.
3. OPEN DOOR PANEL, AND CAREFULLY REMOVE PLEXIGLASS SHIELD.
4. USING A VOLTMETER, VERIFY ALL POTENTIAL VOLTAGES ARE AT "0".
5. LOCATE (A9) MOV BOARD AS SHOWN, MOUNTED ON BREAKER BRACKET.
6. REMOVE (A9) MOV BOARD FROM SNAP TRACK AND OUT OF ATevo.
7. MOUNT REPLACEMENT (A9) MOV BOARD IN SNAP TRACK.

REV. 0	DRN BY	CHK BY	APP BY	DATE 7/5/2023	DRN BY <i>K/B</i>	DATE: 6/14/2023	TITLE ATEvo Service Instructions MOV (A9) INSTALLATION STYLE-5030, 163, 198 100-1000Adc		
DESCRIPTION Initial Release				CHK BY <i>M/S</i>	DATE: 7/5/2023	UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS FOLLOW THE ANSI SYSTEM IPS (INCHES-POUNDS & SECONDS) TOLERANCES ARE: FRAC. ±1/64, DEC. ±0.15, ANG ±.25°			
				APP BY <i>J/K</i>	DATE: 7/6/2023				
PROPRIETARY AND CONFIDENTIAL NOTICE ANY REPRODUCTION, PARTIAL OR AS A WHOLE OF THIS DOCUMENT WITHOUT THE WRITTEN PERMISSION OF HINDLE POWER, INC IS STRICTLY PROHIBITED.						SCALE 1:6	DWG No <b>JD5079-02</b>	REV 0	SHEET 1 OF 1